



ESKRIDGE

SERIES 252 PLANETARY GEAR DRIVE SERVICE AND REPAIR MANUAL

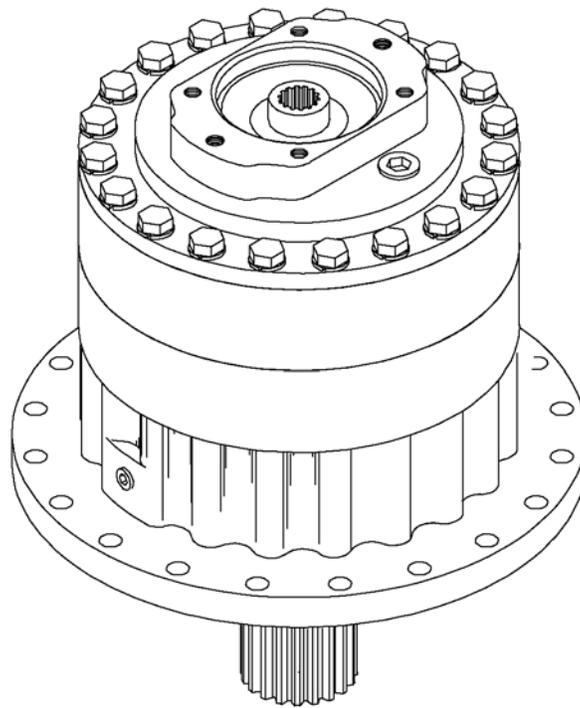

Example Part Number

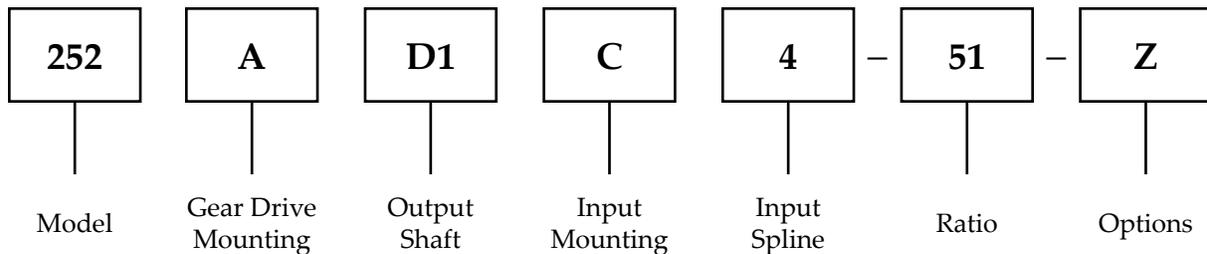

THIS SERVICE MANUAL IS EFFECTIVE
FROM: S/N 28500
TO: CURRENT

SERIES 252 SERVICE MANUAL

DOUBLE STAGE PLANETARY GEAR DRIVE

This manual will assist in disassembly and assembly of the above model planetary gear drives. Item numbers, indicated in parentheses throughout this manual, refer to the exploded parts breakdown drawing. Individual customer specifications (mounting case, output shaft, brake assembly, etc.) may vary from exploded drawing and standard part numbers shown; please refer to individual customer drawings for details.

For any spare or replacement parts, contact your distributor or equipment manufacturer. Always try to have available the gear drive unit part number, serial number and date code from the serial tag; this information may be necessary for verification of any component part numbers. Component part numbers and/or manufacturing lot numbers may be stamped on individual parts; this information may also be helpful in indentifying replacement components.

LUBRICATION & MAINTENANCE

Change oil after the first 50 hours of operation. Oil should be changed at 500 hour intervals thereafter. Use a GL-5 grade EP 80/90 gear oil (EP=Extreme Pressure). The gear drive should be partially disassembled to inspect gears and bearings at 1000 hour intervals.

If your unit was specified "shaft up" or with a "-Z" option, a grease zerk was provided in the base housing. For shaft up operation, the output bearing will not run in oil and must be grease lubricated. Use a lithium base or general purpose bearing grease sparingly every 50 operative hours or at regular maintenance intervals. Over greasing the output bearing tends to fill the housing with grease and thicken the oil.

Operating Position

Horizontal Shaft
Vertical Shaft

Oil Capacity

6.75 pints / 3.2 liters
12.75 pints / 6.0 liters

Oil Level

To horizontal centerline of gear drive
To midway on upper/primary gear set



WARNING: While working on this equipment, use safe lifting procedures and wear adequate clothing and hearing, eye and respiratory protection.

CONTENTS

Example Part Number	1
Lubrication & Maintenance.....	2
Unit Disassembly Procedure.....	3
Primary Planet Carrier Subassembly	3
Disassembly and Repair	3
Reassembly.....	3
Secondary Planet Carrier Subassembly	4
Disassembly and Repair	4
Base Subassembly.....	4
Disassembly and Repair	4
Base Assembly	5
Unit Assembly.....	5
Reassembling	5
Eskridge Product Warranty	7
Warranty Return Policy	7
THE Eskridge Product LINE	8


Unit Disassembly Procedure

(Refer to exploded view drawing on Page 6)

- 1) Scribe a diagonal line across the outside of the unit from the cover (4) to the base (1) before disassembly to assure proper positioning of pieces during reassembly.
- 2) Remove magnetic draining plug (33) and drain oil from unit. Maximum drainage occurs when oil is warm.
- 3) Remove twenty hex-head capscrews (29) and lockwashers (32).
- 4) Remove the cover (4), thrust washer (28), input gear (11) and carrier thrust washer (14). Inspect o-ring (15); discard if damaged or if it has taken a set.
- 5) Lift the primary planet carrier assembly out of the unit. (Includes Items 5, 10, 13, 16, 25 & 30)
- 6) If sun gear (9) has not been removed from the gearbox, do so now. (Sometimes the sun gear remains in the primary carrier (5).)
- 7) Remove primary ring gear (2). Inspect second o-ring (15) as before; discard if damaged.
- 8) Remove carrier thrust washer (14). Lift the secondary planetary assembly (Includes Items 6, 8, 12, 23, 24 & 31) out of the unit; use a puller if necessary.
- 9) Remove secondary ring gear (3). Inspect third o-ring (15) as before; discard if damaged.
- 10) The unit is now disassembled into groups of parts. The area(s) requiring repair should be identified by thorough inspection of the parts after cleaning and drying.

Primary Planet Carrier Subassembly

(Items 5, 10, 13, 16, 25 & 30)

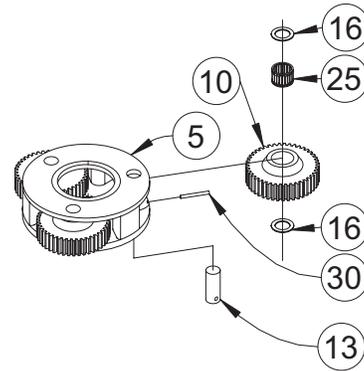

Disassembly and Repair

Rotate planet gears (10) to check for abnormal noise or roughness in bearings (25) or planet shafts (13). If further inspection or replacement is required, proceed as follows.


- 1) Drive roll pins (30) completely into the planet shafts (13).
- 2) Press or drive planet shafts (13) out of carriers (5).
- 3) Remove planet gears (10) and planet washers (16) from the carrier (5).
- 4) If the planet bearings (25) require replacement, press them out of the planet gears (10) and replace with new parts.
- 5) Check primary planet shafts (13) for any abnormal wear, especially where bearings needed to be replaced. If any abnormal wear is found, replace the planet shaft.

Reassembly

- 1) Use 3/16 inch pin punch to remove roll pins (30) from planet shafts (13).
- 2) With planet washers (16) on both sides of the planet gear (10) and with bearings (25) installed, slide gear into the carrier (5). Insert the planet shaft (13) through the carrier, washers and planet gear.
- 3) Planet shafts (13) should be installed with chamfered end of 3/16 inch hole toward outside diameter of the carrier (5). This will aid in alignment of holes while inserting roll pins (30).
- 4) Drive a roll pin (30) through the carrier hole and into the planet shaft to retain the parts. Repeat for other planet gears.

Secondary Planet Carrier Subassembly

(Items 6, 8, 12, 17, 23, 24 & 31)

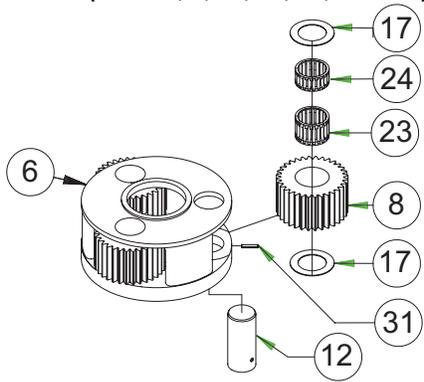


Disassembly and Repair

Follow the same procedure as that for the primary planetary assembly. Substitute items as indicated: planet gears (8), planet bearings (23 & 24), planet shafts (12), roll pins (31), carrier (6) and washers (17).

Base Subassembly

(Items 1, 7, 18, 19, 20, 21, 22, 26, 27, 33, 35 & 36)

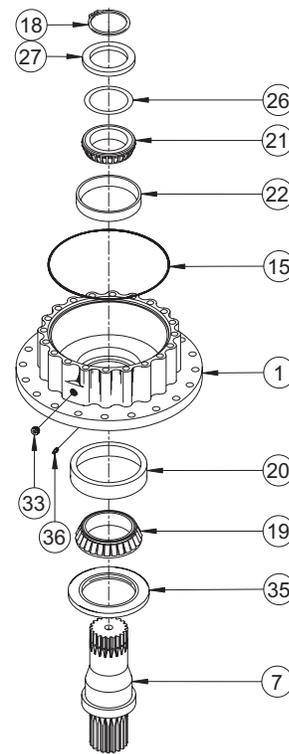

Disassembly and Repair

- 1) Remove the lock ring (27) using a heel bar or a puller. If using a heel bar, do not pry against the cage of the inner output shaft bearing (21). Remove the split ring segments (18) and shims (26).

CAUTION: Output shaft is no longer retained. Care should be taken not to injure feet, as output shaft can fall out. Care should also be taken not to damage output shaft when shaft is pressed through base.

- 2) Output shaft removal. Base (1) should be set pinion side down, as shown, on a plate or table with output shaft (7) protruding through a hole in the table. Press output shaft out bottom of the base by applying a load to top end (internal end) of shaft until it passes through inner shaft bearing cone (21).
- 3) If outer bearing cone (19) (on the shaft) needs to be removed, a gear puller may be used; otherwise, skip to Step 6. If re-using old bearing cone, neither pull or damage the roller cage. Remove the shaft seal (35) for inspection or replacement.
- 4) Lubricate inner lip of new shaft seal (35) and slide the seal onto the shaft (7) until it fits snugly over shaft seal diameter with the open side toward the inside of the gearbox.

NOTE: Press bearing cone onto putput shaft by pressing on inner race only. Do not press on roller cage, as it may damage bearing.

- 5) Press outer bearing cone (19) (large end down, as shown) onto the shaft until it seats against the shoulder. Bearing cone (19) may be reused if it was removed only to replace the seal (35).
- 6) Inspect inner and outer bearing cups (20 & 22). Replace if necessary.

Base Assembly

- 1) Clean all foreign material from magnetic oil plug (33) located on side of base (1). Add a small amount of pipe thread compound to pipe plug before installing back into base.
- 2) Place the base (1) (output side up, opposite shown) on the press table.
- 3) Apply a layer of lithium or general purpose bearing grease to surface of outer bearing cup (20). Insert the shaft into the base (bearing cone down) and use a soft hammer to install the shaft seal (35) into the mounting base.

CAUTION: Output shaft is no longer retained.

- 4) Invert this assembly on the press table, so that it is standing on the shaft.

NOTE: Press bearing cone onto output shaft by pressing on inner race only. Do not press on roller cage, as it may damage bearing.


- 5) Apply a layer of lithium or general purpose bearing grease to the surface of the inner bearing cup (22). Press the inner bearing cone (21) (large end up, as shown) onto the shaft (7) until it is just seated against inner bearing cup (22). A slight preload of less than 100 in-lbs rolling torque should be obtained.
- 6) Relieve the press and slide the shim(s) (26) onto the shaft. Coat the split ring (18) with anti-sieze compound and begin installing ring in groove of shaft. Tap the segments into the groove of the shaft until you can drive the lock ring (27) over the segments. Be sure the lock ring (27) "clicks" over the detent, which helps keep the Load-n-Lock™ in place. Measure the rolling torque of the output shaft; torque is the product of the force (lbs) multiplied by the distance from the gearbox centerline (in). The rolling torque should be 50-100 in-lbs. If the rolling torque is too high, remove the Load-n-Lock™ and remove a shim. Reinstall the Load-n-Lock™ and measure again. If torque is too low, add a shim and measure again.

All subassembly service or repairs should be complete at this time. Continue on through Unit Assembly to complete unit build-up.

Unit Assembly

Reassembling

(Refer to exploded view drawing on Page 6)

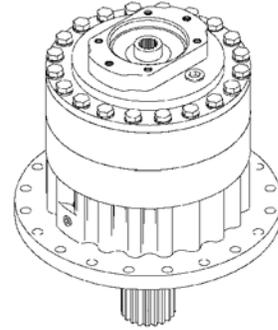

- 1) When all subassemblies are complete, unit is ready to be assembled.
- 2) Lubricate o-ring (15) and install on the O.D. pilot of the secondary ring gear (3). Referring to scribe marks for proper orientation, install the secondary ring gear (3) onto the base (1).
- 3) Install the secondary planet carrier (6); assemble by rotating it until planet gears line up with ring gear teeth and shaft spline. Press until fully seated on shaft (7).
- 4) Lubricate o-ring (15) and install on the O.D. pilot of the primary ring gear (2) and install the primary ring gear (2). Refer to scribe marks for proper orientation.
- 5) Slide the sun gear (9) onto the secondary planet carrier (6).
- 6) Install carrier thrust washer (14).
- 7) Install primary planet carrier (5); assemble by rotating it until planet gears line up with ring gear teeth and sun gear spline. Assembly should drop into place.
- 8) Slide the input gear (11) into the primary planetary carrier.
- 9) Install carrier thrust washer (14) and input gear thrust washer (28).
- 10) Lubricate o-ring (15) and install on the O.D. pilot of the cover (4). Position the cover (4) with the proper orientation. Install the twenty 5/8-11 capscrews (29) with lockwashers (32) and torque to 220 ft-lbs (dry), 170 ft-lbs (wet).
- 11) Fill to proper level, as specified on page 2, with EP 80/90 gear oil after unit is sealed with a brake and/or motor.


THE GEARBOX IS NOW READY TO USE.



ESKRIDGE

MODEL 252

ITEM	QTY	DESCRIPTION	RATIO →					
			20.25:1 4.3125:1 4.6957:1	25.88:1 4.3125:1 6.00:1	29.58:1 6.30:1 4.6957:1	37.80:1 6.30:1 6.00:1	40.25:1 8.5714:1 4.6957:1	51.43:1 8.5714:1 6.00:1
EFFECTIVE: FROM: S/N 28500 01/01/97 TO: CURRENT			PART NO.	PART NO.	PART NO.	PART NO.	PART NO.	PART NO.
1	1	250A BASE - ROUND	25-004-3012	25-004-3012	25-004-3012	25-004-3012	25-004-3012	25-004-3012
	1	250F BASE - FLANGELESS	25-004-3022	25-004-3022	25-004-3022	25-004-3022	25-004-3022	25-004-3022
	1	250Q BASE - ECCENTRIC PILOT	25-004-3152	25-004-3152	25-004-3152	25-004-3152	25-004-3152	25-004-3152
	1	CUSTOM BASE						
2	1	RING GEAR - PRIMARY	25-004-1012	25-004-1012	25-004-1012	25-004-1012	25-004-1012	25-004-1012
3	1	RING GEAR - SECONDARY	25-004-1022	25-004-1022	25-004-1022	25-004-1022	25-004-1022	25-004-1022
4	1	A - SAE 'A' COVER	25-005-2061	25-005-2061	25-005-2061	25-005-2061	25-005-2061	25-005-2061
		B - SAE 'B' COVER	25-005-2051	25-005-2051	25-005-2051	25-005-2051	25-005-2051	25-005-2051
		C - SAE 'C' (2 AND 4 BOLT)	25-004-1222	25-004-1222	25-004-1222	25-004-1222	25-004-1222	25-004-1222
		D - SAE 'D' COVER	25-004-1232	25-004-1232	25-004-1232	25-004-1232	25-004-1232	25-004-1232
5	1	CARRIER - PRIMARY	25-004-1052	25-004-1052	25-004-1042	25-004-1042	25-004-1032	25-004-1032
6	1	CARRIER - SECONDARY	25-004-1072	25-004-1062	25-004-1072	25-004-1062	25-004-1072	25-004-1062
7	1	D1 - OUTPUT SHAFT 20T 6/12 SPLINE	25-004-4012	25-004-4012	25-004-4012	25-004-4012	25-004-4012	25-004-4012
		D2 - OUTPUT SHAFT 3.75" DIA, KEYED	25-004-4022	25-004-4022	25-004-4022	25-004-4022	25-004-4022	25-004-4022
		C1 - OUTPUT SHAFT - CUSTOM						
8	3	PLANET GEAR - SECONDARY	25-004-1092	25-004-1082	25-004-1092	25-004-1082	25-004-1092	25-004-1082
9	1	SUN GEAR - SECONDARY	25-004-1152	25-004-1142	25-004-1152	25-004-1142	25-004-1152	25-004-1142
10	3	PLANET GEAR - PRIMARY	25-004-1122	25-004-1122	25-004-1112	25-004-1112	25-004-1102	25-004-1102
11	1	INPUT GEAR INPUT 14T SPL	25-004-1202	25-004-1202	25-004-1172	25-004-1172	25-004-1162	25-004-1162
		INPUT GEAR INPUT 13T SPL	25-004-1292	25-004-1292	25-004-1282	25-004-1282	25-004-1272	25-004-1272
12	3	PLANET SHAFT - SECONDARY	25-004-1021	25-004-1021	25-004-1021	25-004-1021	25-004-1021	25-004-1021
13	3	PLANET SHAFT - PRIMARY	25-004-1031	25-004-1031	25-004-1031	25-004-1031	25-004-1031	25-004-1031
14	2	THRUST WASHER - CARRIER	25-004-1132	25-004-1132	25-004-1132	25-004-1132	25-004-1132	25-004-1132
15	3	SEAL (O-RING)	01-402-0020	01-402-0020	01-402-0020	01-402-0020	01-402-0020	01-402-0020
16	6	THRUST WASHER - PRI. PLANET	81-004-1561	81-004-1561	81-004-1561	81-004-1561	81-004-1561	81-004-1561
17	6	THRUST WASHER - SEC. PLANET	25-004-1041	25-004-1041	25-004-1041	25-004-1041	25-004-1041	25-004-1041
18	1	RETAINING RING	01-160-0600	01-160-0600	01-160-0600	01-160-0600	01-160-0600	01-160-0600
19	1	BEARING CONE - OUTER	01-102-0240	01-102-0240	01-102-0240	01-102-0240	01-102-0240	01-102-0240
20	1	BEARING CUP - OUTER	01-103-0240	01-103-0240	01-103-0240	01-103-0240	01-103-0240	01-103-0240
21	1	BEARING CONE - INNER	01-102-0250	01-102-0250	01-102-0250	01-102-0250	01-102-0250	01-102-0250
22	1	BEARING CUP - INNER	01-103-0250	01-103-0250	01-103-0250	01-103-0250	01-103-0250	01-103-0250
23	3	BEARING - SEC PLANET GEAR	01-105-0550	01-105-0550	01-105-0550	01-105-0550	01-105-0550	01-105-0550
24	3	BEARING - SEC PLANET GEAR	01-105-0560	01-105-0560	01-105-0560	01-105-0560	01-105-0560	01-105-0560
25	3	BEARING - PRI PLANET GEAR	01-105-0570	01-105-0570	01-105-0570	01-105-0570	01-105-0570	01-105-0570
26	*	SHIM - SHAFT ADJUSTMENT	25-004-1051	25-004-1051	25-004-1051	25-004-1051	25-004-1051	25-004-1051
27	1	SPACER	25-004-1061	25-004-1061	25-004-1061	25-004-1061	25-004-1061	25-004-1061
28	1	THRUST WASHER - INPUT GEAR	81-004-2883	81-004-2883	81-004-2883	81-004-2883	81-004-2883	81-004-2883
		THRUST WASHER - F/U/W/ 13T 8/16 INPUT	01-112-0030	01-112-0030	01-112-0030	01-112-0030	01-112-0030	01-112-0030
29	20	HEX HEAD CAPSCREW (5/8-11 X 7) GR 8	01-150-1630	01-150-1630	01-150-1630	01-150-1630	01-150-1630	01-150-1630
30	3	ROLL PIN (3/16 X 1)	01-153-0020	01-153-0020	01-153-0020	01-153-0020	01-153-0020	01-153-0020
31	3	ROLL PIN (3/16 X 1 1/4)	01-153-0190	01-153-0190	01-153-0190	01-153-0190	01-153-0190	01-153-0190
32	20	LOCKWASHER - (5/8)	01-166-0040	01-166-0040	01-166-0040	01-166-0040	01-166-0040	01-166-0040
33	1	PIPE PLUG (1/2 NPT MAGNETIC) - BASE	01-207-0041	01-207-0041	01-207-0041	01-207-0041	01-207-0041	01-207-0041
34	1	PLUG - COVER	01-208-0030	01-208-0030	01-208-0030	01-208-0030	01-208-0030	01-208-0030
35	1	SHAFT SEAL	01-405-0670	01-405-0670	01-405-0670	01-405-0670	01-405-0670	01-405-0670
36	1	PLUG 1/4 NPT	01-207-0020	01-207-0020	01-207-0020	01-207-0020	01-207-0020	01-207-0020
		GREASE FITTING (OPTIONAL-SHOWN)	01-215-0040	01-215-0040	01-215-0040	01-215-0040	01-215-0040	01-215-0040

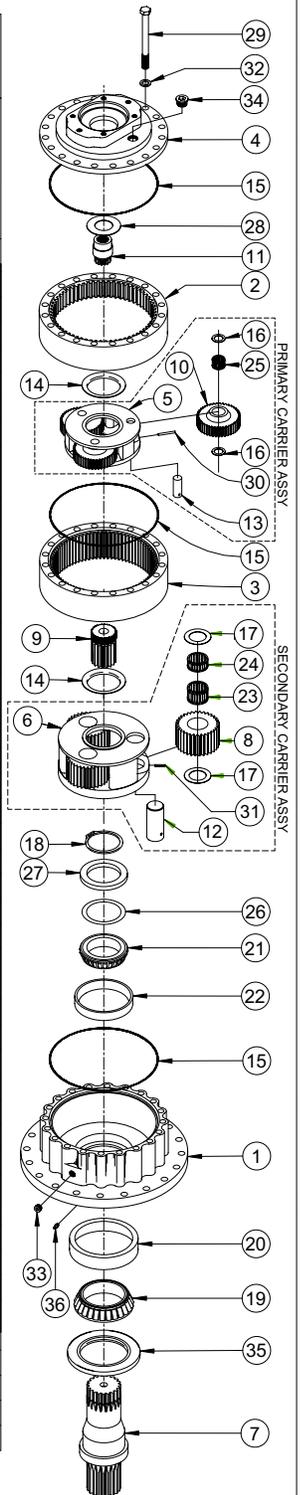

1 FOR 13T, 8/16 INPUT SPLINE, USE P/N 01-112-0030 THRUST WASHER. (USE ONLY WITH 'D' COVER).

* QUANTITY OF SHIMS DETERMINED BY BEARING PRELOAD.

OPTIONS SEAL KIT P/N 25-016-2011
INCLUDES 1 EA. OF ITEMS 35
AND A QTY 3 OF ITEM 15

E.C.N. 2325
X252KD2-AE DATE: 06-13-05

Eskridge Product Warranty

ESKRIDGE, INC. ("Eskridge") warrants to its original purchaser ("Customer") that new component parts/units ("Units") sold by Eskridge will be free of defects in material and workmanship and will conform to standard specifications set forth in Eskridge sales literature current at the time of sale or to any custom specifications acknowledged by written Customer approval of drawings, SUBJECT TO THE FOLLOWING QUALIFICATIONS AND LIMITATIONS:

1. Prior to placing Units in service, the Customer shall provide proper storage such that foreign objects (e.g., rain or debris) cannot enter any Units via entry ports which are normally closed during operation.
2. The Customer must notify Eskridge in writing of any claim for breach of this warranty promptly after discovery of a defect. The warranty period shall commence when a unit is placed in service and shall expire upon the earlier of
 - a. the expiration of twelve (12) months from the date of Commencement of Service (as defined in Paragraph 4)
 - b. the completion of one thousand (1000) hours of service of the Units
 - c. the expiration of six (6) months after the expiration of any express warranty relating to the first item of machinery or equipment in which the Units are installed or on which it is mounted, or
 - d. the installation or mounting of the Units in or on an item of machinery or equipment other than the first such item in which the Units are installed or on which the Units are mounted.
3. Units shall be deemed to have been placed in service (the "Commencement of Service") at the time the machinery or equipment manufactured or assembled by the Customer and in which the Units are installed or on which the Units are mounted is delivered to the Customer's dealer or the original end-user, which ever receives such machinery or equipment first.
4. This warranty shall not apply with respect to Units which, upon inspection by Eskridge, show signs of disassembly, rework, modifications, lack of lubrication or improper installation, mounting, use or maintenance.
5. Eskridge makes no warranty in respect to hydraulic motors mounted on any Units. Failure of any such motor will be referred to the motor manufacturer.
6. Claims under this warranty will be satisfied only by repair of any defect(s) or, if repair is determined by Eskridge in its sole, absolute and uncontrolled discretion to be impossible or impractical, by replacement of the Units or any defective component thereof. No cash payment or credit will be made for defective materials, workmanship, labor or travel. IN NO EVENT SHALL ESKRIDGE BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND OR NATURE, FOR WHICH DAMAGES ARE HEREBY EXPRESSLY DISCLAIMED.
7. From time to time, Eskridge may make design changes in the component Units manufactured by it without incorporating such changes in the component Units previously shipped. Such design changes shall not constitute an admission by Eskridge of any defects or problems in the design of previously manufactured component Units.
8. All freight charges on Units returned for warranty service are the responsibility of the Customer.

Warranty Return Policy

1. Any part/Unit(s) returned to Eskridge must be authorized by Eskridge with an assigned return (CSR) number.
2. All Units shall be returned freight prepaid.
3. Any Units qualifying for warranty will be repaired with new parts free of charge (except for freight charges to Eskridge as provided above).
4. If Units are found to be operable, you have two options:
 - a. The Units can be returned to you with a service charge for inspection, cleaning, and routine replacement of all rubber components and any other Units that show wear;
 - b. We can dispose of the Unit(s) at the factory if you do not wish it to be returned.

NOTE: Any order of Units by customer shall only be accepted by Eskridge subject to the terms stated herein. Any purchase order forms used by Customer (to accept this offer to sell) which contain terms contrary to, different from, or in addition to the terms herein shall be without effect, and such terms shall constitute material alteration of the offer contained herein under K.S.A 84-2-207 (2)(b), and shall not become part of the contract regarding the sale of the Units.

The foregoing warranty is the sole warranty made by Eskridge with respect to any Units and is in lieu of any and all other warranties, expressed or implied. There are no warranties which extend beyond the description on the face hereof without limiting the generality of the foregoing, Eskridge expressly disclaims any implied warranty of merchantability or fitness for any particular purpose, regardless of any knowledge Eskridge may have of any particular use or application intended by the purchaser. The suitability or fitness of the Units for the customer's intended use, application or purpose and the proper method of installation or mounting must be determined by the customer.

THE ESKRIDGE PRODUCT LINE

PLANETARY GEAR DRIVES

SERIES	TORQUE RATING (IN-LB) MAX. INTERMITTENT
20 - SHAFT OUTPUT	20,000
28 - SHAFT OUTPUT	50,000
50 - SHAFT OUTPUT OR SPINDLE OUTPUT	50,000
65 - SHAFT OUTPUT	65,000
105 - SHAFT OUTPUT	105,000
130/133 - SHAFT OUTPUT OR SPINDLE OUTPUT	130,000
150 - SHAFT OUTPUT	150,000
250/252 - SHAFT OUTPUT OR SPINDLE OUTPUT	250,000
440 - SHAFT OUTPUT, SPINDLE OUTPUT OR WHEEL DRIVE	440,000
600 - SHAFT OUTPUT, SPINDLE OUTPUT OR WHEEL DRIVE	600,000
1000 - SHAFT OUTPUT, SPINDLE OUTPUT OR WHEEL DRIVE	1,000,000

MULTIPLE DISC BRAKES

SERIES	FEATURES	TORQUE RATING (IN-LB)
10 - INTEGRAL BRAKE	SAE B	TO 4,800
90B	SAE B	TO 4,800
90BA	SAE B, ADJUSTABLE TORQUE	TO 4,800
92B	SAE B, LOW PROFILE	TO 2,800
93 (931 OR 932)	FOR NICHOLS MOTORS	TO 6,100
95C	SAE C	TO 12,000
95W	SAE C WHEEL MOUNT	TO 21,000
98D	SAE D	TO 25,000

PLANETARY AUGER DRIVES, ANCHOR DRIVES & DIGGERS

SERIES	MODELS	TORQUE RATING (FT-LB)
D50	1500, 2500 & 5000	1,500 - 5,000
76	BA & BC, 2-SPEED	8,000 - 12,500
77	BA, BC & BD	6,000 - 12,500
78	35 & 48, 2-SPEED	9,000 - 12,500
75	38 & 51, 2-SPEED	16,500 - 20,000
D600	D600	50,000
D1000	D1000	83,000

